

We thank you for buying mobile phone X-style 24. Given manual includes description of main mobile phone functions.

The phone X-style 24 allows to use 2 SIM cards of GSM standard at dual standby mode, i.e., in standby mode there are 2 cards in the connection; during the call 1 card works in active mode, 1 other card are unavailable.

The content of given manual is right. The description of some functions may differ due to changes in software or provider services. The company keeps the right to arrange changes in technical specifications without previous warning.

Key remarks in security technics.

Given phone is assigned for calling and receiving calls, sending SMS messages, surfing the Internet (may be unavailable) etc.

Read carefully the below section and strictly keep following instructions.

The phone doesn't contain any materials harmful for health.

- Don't use the phone during the thunderstorm outside.
- Keep the battery off from high temperature, explosive and flammable liquids.
- Power the phone off in case if using the phone can cause the obstacle or danger.
- Do not put the prone in heating devices such as microwave oven, hot plate or heater.
- Do not try to open the mobile phone's case. If phone or any of accessories do not work properly, please contact the closest authorized service center.

- Use only accessories and charging devices assigned to this model. Do not use defective or second hand chargers.
- Do not let the battery short circuit happen.
- If you use any personal medical devices, please clarify from producer whether device has sufficient protection from radiation in radio-spectrum. Power the phone off in medical institutions if it is required with inner regulation rules.
- Do not use the phone during driving. Follow mobile phone using recommendations while driving.
- Keep the phone, all its components and accessories in a place unavailable for kids and pets. They may damage the device or accidentally choke with small details.
- Avoid contacting phone with water.
- Do not use potent chemicals, dissolvent or bleaches for cleaning the phone.
- Do not subject the device under the effect of direct sun rays.
- To avoid getting heavy metals, acids, chemicals in water or ground what cause significant damage to environment, wasted accumulator battery should be utilized after end of service term in accordance to the law regulations. Juristic responsibility occurs in case of failure to comply with legislation.

Data about safe utilization of lithium-ion batteries may be obtained in the closest specialized service center.


Specifications

Phone	2 SIM (mini-SIM) GSM: 850/900/1800/1900 MHz
Messages	SMS
Display	2,4", color LCD, 240x320 pix
Camera	0,3 Mpx
Supporting formats	MIDI, AAC, MP3, WAV, JPG
FM-radio	87,5-108,0 MHz
Micro-SD	till 32 Gb
Battery	Li-Ion, 800 mAh

Package includes:

- Mobile phone
- Charging device
- USB-micro-USB cable
- Headset microUSB
- User manual
- Warranty card

Phone buttons.

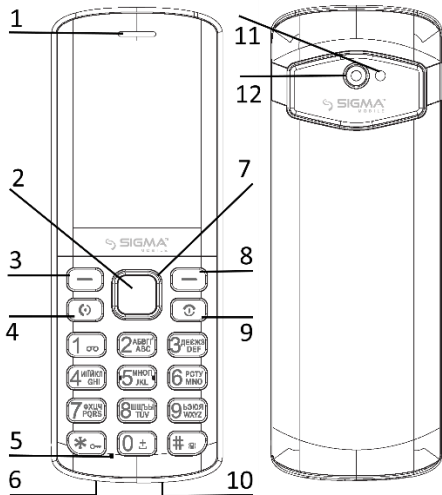

1	Front dynamic
2	Central (OK) key

3	Left soft button
4	Calling\receiving call
5	Reset key
6	SIM/microSD slot
7	Navigation buttons
8	Right soft button
9	Rebound\Cancel\ (long pressing - to power on or power off phone)
10	microUSB port
11	Flash/Torch
12	Camera

Keys specification


0-9	<p>When dial a number, enter corresponding number.</p> <p>In input mode, enter different characters according to input mode, like letter or number.</p> <p>Press and hold 2-9 – for speed dial. Press and hold 0 – to input +, P, W.</p>
* key	<p>When dial a number, press to enter “*”.</p> <p>In idle mode, press * key, cyclically shows *. In text edit mode press * to input special symbols</p>

	Press left soft key then press * key to lock/unlock keypad.
# key	In idle mode, long press # activate or deactivate silent profile. In text edit mode, press # to select input language or mode. When dial a number, press to enter "#".
Left soft key	Perform the functions indicated on the left bottom line of the display. Press left soft key then press * key to lock/unlock keypad.
Right soft key	Perform the functions indicated on the right bottom line of the display. Press right soft key to return to upper menu. In idle mode, press right soft key to access Phonebook menu.
Central Key	Menu / OK. Press and hold in standby mode - Enable / Disable Torch

Inserting SIM cards and memory card

Install the SIM card (nanoSIM) provided by your mobile operator and, if necessary, a microSD card. Insert SIM cards in proper device slots.


1. Turn off the phone. Carefully remove the tray that has SIM and microSD cards installed. Use the key to open the tray
2. Insert the SIM card and, if necessary, a microSD card.

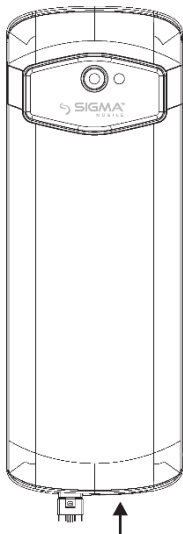

Warning! The body of the phone is non-separable. It is possible to use either two SIM cards (microSIM and nanoSIM format) or one SIM card (microSIM) and a microSD card at the same time. Do not insert the memory card into the SIM card slot. If the memory card is stuck in the SIM card slot, contact your authorized Sigma mobile service center for safe removal. Be careful not to lose your SIM card and do not let others use it. Sigma mobile is not liable for any damage or inconvenience caused by the loss or theft of the cards.

Power on the phone long pressing button 9 (red handset). It is recommended to arrange full battery charge before first use.



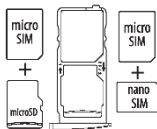







3. Install the tray in the appropriate slot and secure it



Turn the phone on by pressing the shutter button long.

We recommend you to charge the battery fully before first usage.

Conditional screen marks on phone

	Connection signal
	Battery charge indicator
	New message
	Missed call
	Silence profile activated
	Outdoor profile activated
	Meeting profile activated
	Alarm clock is active
	Bluetooth switched on
	Keyboard locked

Power on/off the device

To power on the device press and hold *Cancel* button until activation of device display.

To power off press and keep *Cancel* button until shutdown.

Device locking occurs automatically, or after consequent pressing left soft button and button «*». Unlocking occurs through consequent pressing left soft-button and button «*».

Calling

To call - dial number on digital keyboard in local or international format, or choose number from phone contacts list, and press calling button. Choose from which SIM-card to call. To cancel call - press button 'cancel'.

During call it is also possible to: switch volume in a speakerphone mode, start conversation record, add more persons to conference conversation, turn off\switch on microphone and etc.

Main menu

To access the main device menu you need to press left soft-button or central navigation button.

Menu includes following section:

Phonebook: phone book including phone, SIM cards storage;

Messaging: to send SMS messages and read received messages;

Call center: incoming, outgoing and missed calls register;

Settings: Profiles, Phone settings, dual SIM settings, security settings, network settings, Restore settings

Audio player: The audio player launches in a separate menu

Multimedia: device media-functions are concentrated in this menu: Camera, Image viewer, sound recorder,

File manager: to manage files

FM radio

Tools: Bluetooth, Calendar, Alarm, Flashlight, Calculator, World clock

Contacts

The Contacts menu is your phone book, which contains contacts stored in the phone and on SIM cards. The phone memory is designed to store 500 contacts.

Contacts are in alphabetical order. The search string allows you to find contacts, the search is organized by the first letters of the name of the contact. To switch the method / language of the search press the # key

Add New contact: Add a new contact. Before creating, you have to choose a place to save the contact.

To view the contact, select the cursor and press the center navigation key.

For a call, press the call button.

Additional options open with the left soft key.

Send SMS: Create and send a text or multimedia message to a contact.

Edit: edit the contact

Delete: delete the selected contact.

Copy: Copy contact between phone and SIM card.

Add to blacklist.

It is also possible to: view the status of the memory, and delete all contacts, copying or moving contacts between SIM and phone

Adding a new contact: Choose "Add new contact", choose a place to save the contact, enter a name and phone number, press "options-save"

For one contact, you can add the following information: Name, Phone number

Messaging

This menu contains everything you need to send, store, view and delete SMS messages.

Write message: Select to write and send (or save) a new message.

Inbox: Folder with received messages.

Outbox: Folders with sent messages.

Drafts: incomplete messages.

Sent messages: Messages that have been sent.

Settings: settings for sending SMS

The Settings menu allows you to set the SMS center numbers for both SIM cards, set the validity period of the message, configure receipt of the delivery status report, adjust the settings for saving messages, switch off or enable push messages.

Call center

Call center menu contains incoming, outgoing and missed calls register and allows: dial contact number, send SMS-messages, add new number to contacts, add number to black list, delete information about call and etc. In Call Settings, you have the option to: view and edit the Blacklist, enable / disable Auto Redial, enable/disable Automatic Call Recording, Alarm Alert, select Response Mode, set up Call waiting, Call divert, Call barring etc

Settings

Profiles: This menu is assigned for setting sound profiles, i.e. volume characteristics, ringtones, vibrate mode, button sound and systems for different conditions of phone using, such as: general, outdoor, meeting, silent.

Built-in settings are editable by pressing Options--Customize.

To activate settings choose profile in menu and press central button

Dual SIM settings: The phone supports two SIM cards, switching from one to another if necessary.

This affords to use the services of two operators without using the second phone.

You can choose from 3 modes: DUAL SIM, only SIM1, only SIM2

Phone settings: contains date and time settings, interface languages, settings of shortcuts buttons and dedicated keys.

Display: wallpaper settings, screen and backlight timeout.
Flight mode – to on/off Flight mode.

Security: set up SIM-card lock and phone lock.

Network: set up network selection for both SIM

Restore settings. Lets you reset your phone to factory settings.

WARNING. *Reset code 1122*

Audioplayer

The audio player is intended for listening to music files. To play / pause, press the center key. To move to the next / previous file - Right / Left. To create a playlist, copy the music files to the memory card in the My music folder. To change the settings, go to List-Options – Settings. To adjust the volume use * (volume down) and # (volume up) keys.

Multimedia

Caution: It is desirable to use the following functions in the menu "Multimedia" under the condition of the installed memory card.

This section contains applications for working with photos, videos and sound.

Camera - to shoot a photo

Image viewer - to view images.

Sound recorder - for recording sound.

File manager

File manager allows working with files in phone memory and in memory card. Following operations are available: copying, moving, deleting, creating folders, or setting melodies as phone ringtones.

FM radio.

To listen to radio stations

NBI *To listen to FM radio, connect the wired headphones.*

To turn on / off, press the center key. To search for radio stations, press Right / Left. To fine-tune the channel frequency - Up / Down. Use the * (to decrease) and # (to increase) to adjust the volume. The Options menu has the ability to automatically and manually search channels, view saved stations, record files in a file and enable / disable background playback.

Tools

The following programs are available in this menu:

Bluetooth – for connect and manage devices

Calendar - for viewing calendar.

Calculator - for arithmetic calculations.

Alarm - allows to set few alarms simultaneously.

Torch on/off

Troubleshooting

Following recommendations may help to solve some problems with phone independently. In case problems occur, try to solve it yourself with following recommendations. If problem is not solved, contact to Sigma mobile service center. Check whether battery is charged and whether problem continues after device reset.

Try to restore factory settings through menu «Settings - phone – Default settings» (password by default – 1122)

Problems with memory card mostly occurs in case of memory card breakage. Thus, firstly check given card separately. Also recommended to: take off and insert memory card in port, check whether card is put in port correctly, reload phone.

Phone does not power on: check battery charge, repeatedly connect charging device, and wait at least 10 minutes. Press and keep the button «Power on» not less than 5 second. If device does not power on contact in service center.

Battery discharges rapidly: reasons for increased battery charges may be low air temperature, active using of media programs, and huge distance to cellular tower of connection operator.

Battery does not charge: check charging adapter connection to plug. Use only complete charging adapter and cable.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrect input of contact number, activated function of calling prohibition. Try

to change location, check level of connection signal, wipe phone to factory reset. Contact in service center.

Low receiver volume: during conversation, press button «up» to increase volume. Set volume during conversation in profiles. Check signal of cellular connection.

Passwords

Requests to input following passwords may occur during activating and phone use:

Phone password: request occurs during activating. This is the password of general locking.

PIN-code: if Pin-code checking is active, it is required to input code, which is given with SIM-card.

PUK code, PIN2 code - also given with SIM card.

Be careful installing blocking passwords: if they are lost, to renew phone functionality is possible only in service center.