



EN ■ Cordless vacuum cleaner 2 in 1

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE REFERENCE

- This vacuum cleaner may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this vacuum cleaner in a safe manner and understand the potential danger.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- If the power adapter is damaged, it must be replaced with an original type. For a replacement power adapter, please contact an authorised service centre. It is forbidden to use the appliance if it has a damaged power adapter.
- Only use the vacuum cleaner with the original power adapter, charging base and accessories that were supplied with it.
- Keep the vacuum cleaner and its accessories out of reach of children that are younger than 8 years of age.
- Disconnect the power adapter from the power outlet prior cleaning and maintenance of the appliance.
- This vacuum cleaner is designed for use in households, offices and similar types of area. Do not use it in industrial surroundings and outdoors.
- Do not expose the vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Before connecting the adapter to a power socket, check that the technical details on its rating label match the electrical voltage in the power socket.
- Make sure the adapter power cord is not touching a hot surface or sharp objects. Position the adapter power cord so that it will not be tripped over.
- Never submerge the vacuum cleaner, charging base or the power adapter in water or any other liquid and do not wash under running water.
- Before turning on the vacuum cleaner, check the dust container and the filters are properly installed.
- When the vacuum cleaner is running, ensure that the air outlets and the suction opening are not blocked.

- Do not use the vacuum cleaner to vacuum the following items:
 - Smouldering cigarettes, burning items, matches or embers;
 - Water and other liquid;
 - Flammable or volatile materials;
 - Sharp items, e. g. broken glass, needles, pins, etc.;
 - Flour, wall plaster, cement and other building materials;
 - Larger pieces of paper or plastic bags, which can easily block the suction opening.
- Vacuuming of some types of floors can create electrostatic discharge, which presents no danger to the user.
- Always turn off the vacuum cleaner if you have finished using it, before cleaning or placing it in the charging base.
- Disconnect the power adapter from the power socket before cleaning it and after it has finished the charging.
- Disconnect the power adapter from the power socket by pulling on the plug; never pull on the power cord. Otherwise, this could damage the power adapter or the socket.
- Do not use the vacuum cleaner if it is not working correctly, if it has been damaged or has been submerged in water. Do not repair the vacuum cleaner yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.



Warning:

There is a knife, installed in the charging base, to cut off the hair and animal fur from the rotary brush. The knife is very sharp. Avoid any contact with it. There is a risk of a serious injury when mishandled. Follow the instruction written in this user's manual.





Carefully read this user's manual and familiarize yourself with all warnings and instructions.




Warning:


Do not disassemble, crush, shock, short or heat above 60 °C the battery; do not incinerate. Risk of fire and burns. Before using the appliance, properly read all the instructions in this user's manual.

A

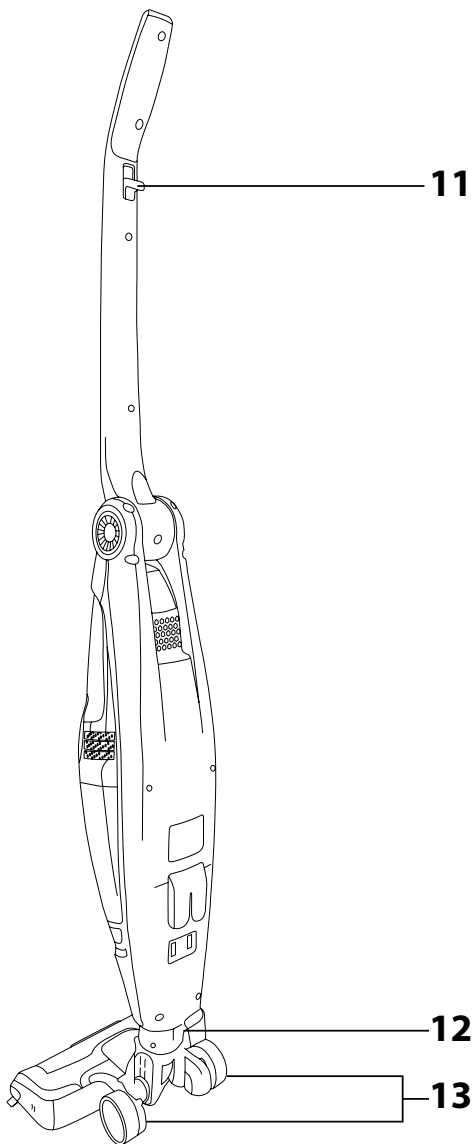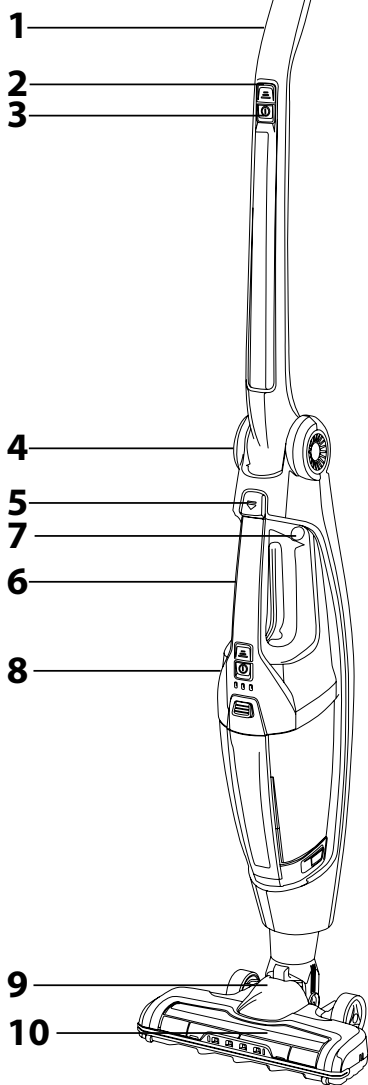


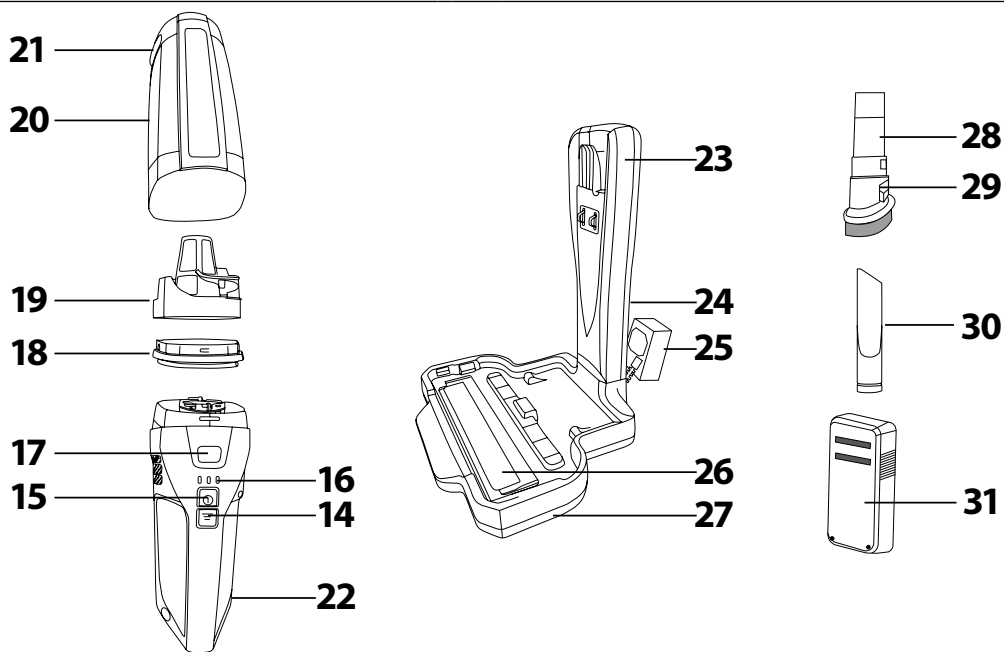


B

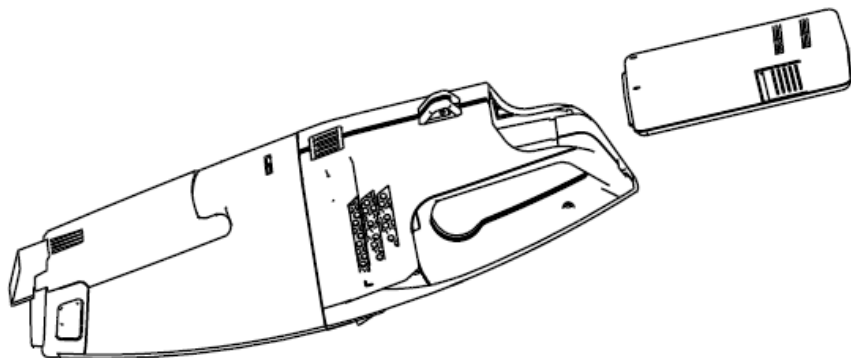



C

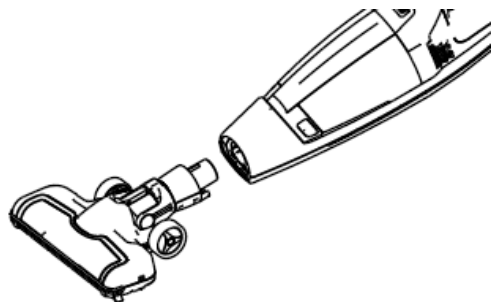



D

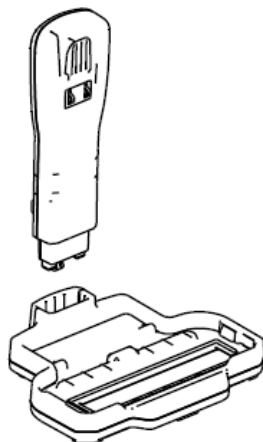



E

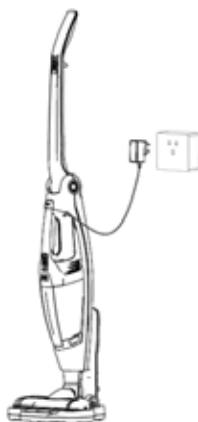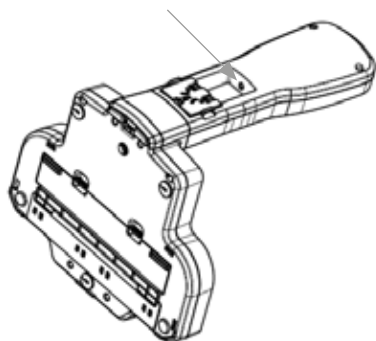

F

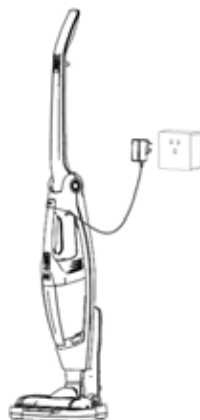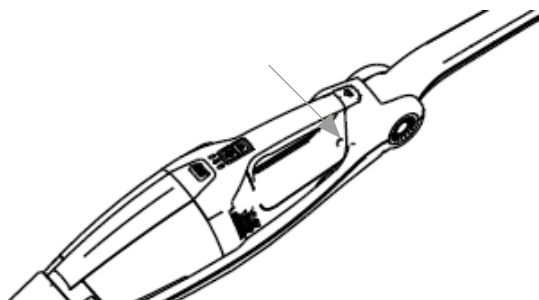



G

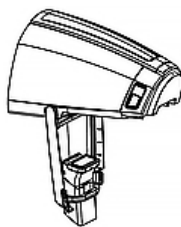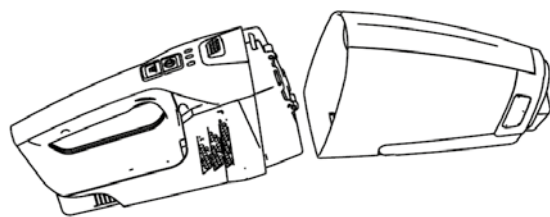

H



I

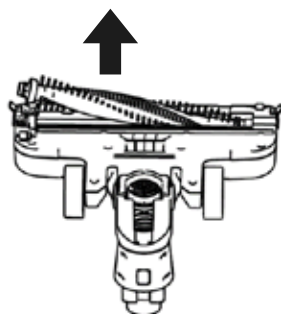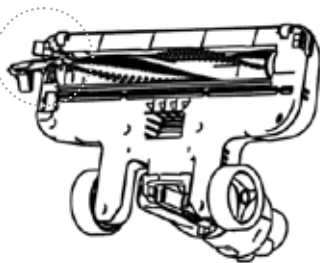

Cordless vacuum cleaner 2 in 1

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, and purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE VACUUM CLEANER AND ITS ACCESSORIES

A1 Vacuum cleaner handle with a bend	A19 Washable internal filter
A2 On/Off button of the vacuum cleaner	A20 Dust container
A3 Suction level button of the vacuum cleaner	A21 Release button of the bottom side of the dust container
A4 Vacuum cleaner bend	A22 Battery space (at the back of the hand vacuum cleaner)
A5 Release button of the hand vacuum cleaner from the vacuum cleaner body	A23 Charging base
A6 Handle of the hand vacuum cleaner	A24 Power adapter charging socket
A7 Power adapter charging socket	A25 Power adapter
A8 Hand vacuum cleaner	A26 Protection cover of the knife to cut off the hair and animal fur
A9 Step-in area for automatic cut-off hair from the rotary brush	knife to cut off the hair and animal fur (located under the protection cover, not shown)
A10 Floor nozzle with an electric rotary brush	A27 Dust compartment (located at the bottom part of the charging base)
A11 Bend button	A28 Small multi-purpose brush nozzle
A12 Floor nozzle release button	A29 Slide control to pull out and hide the brush
A13 Wheels	A30 Crevice nozzle
A14 Suction level button of the hand vacuum cleaner	A31 Battery of the hand vacuum cleaner
A15 On/Off button of the hand vacuum cleaner	
A16 LED indicators of charging and battery level	
A17 Dust container release button	
A18 External filter	

BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.

ASSEMBLY

Hand vacuum cleaner

- At the back side of the hand vacuum cleaner, there is a slot to insert the battery **A31**. Insert the battery **A31** into the slot as shown in picture B. The correct installation of the battery **A31** is indicated by a click sound.
- Ensure the dust container **A20** is attached to the hand vacuum cleaner **A8**.

Upright vacuum cleaner

- Connect the floor nozzle **A10** to the bottom part of the upright vacuum cleaner as shown in the picture C. The correct connection of the floor nozzle **A10** is indicated by a click sound. Press the bend button **A11** and bend the handle **A1** to the upright position till you hear a click sound. Install the hand vacuum cleaner **A8** into the space in the middle of the vacuum cleaner body.

Charging base

- Insert the upper part of the charging base into the lower part as shown in the picture D.

PARKING POSITION OF THE VACUUM CLEANER

- Put the vacuum cleaner into the parking position by placing the tip of your foot on the top of the floor nozzle **A10** and with a simply forward movement of the handle **A1** secure the vacuum cleaner in the vertical position. The latch located at the front of the elbow of the floor nozzle **A10** will slide into the groove on the top cover of the floor nozzle **A10**.
- To release the vacuum cleaner from the parking position, place the tip of your foot on the top of the floor nozzle **A10** and tilt the hand **A1** backwards. The latch located at the front of the elbow of the floor nozzle **A10** will slide out of groove on the top cover of the floor nozzle **A10**.

CHARGING THE VACUUM CLEANER

- Place the assembled charging base **A23** on the flat, dry and stable surface within reach of the power socket.
- Connect the connector of the power adapter **A25** to the socket **A24** at the back of the charging base **A23** and insert the plug of the power adapter **A25** into the power socket – see picture E. Or you can connect the connector of the power adapter **A25** to the socket **A7** in the hand vacuum cleaner **A8** – see picture F.



Note:

Before charging, it is important the vacuum cleaner has been turned off and has been tilted in the upright position.

- Once the adapter **A25** has been inserted into the power socket, the vacuum cleaner will switch to charging mode and LED indicators **A16** will signal the power level of the battery **A31**. A full charge requires approximately 3 hours. The actual charging time depends on the power level of the battery.
- Once the charging process is complete, all LED indicators **A16** will be lit. Disconnect the power adapter **A25** from the power socket.
- If one LED indicator is flashing while vacuuming, the battery **A31** is low and it needs to be charged.



Warning:

If all LED indicators **A16** flash, the vacuum cleaner might be broken. In such case, at first remove and re-insert the battery **A31** a turn on the vacuum cleaner. If the problem persists, stop using the vacuum cleaner and contact the authorised service centre.



Note:

This vacuum cleaner contains a built-in Li-ion battery. To ensure the longest possible lifetime of the battery, we recommend:

- Do not unnecessarily leave the battery fully charged or completely flat for too long.
- Do not keep the battery permanently fully charged. Its lifetime will be extended by keeping it at approximately half charge.
- Do not fully discharge the battery.



Note:

The power adapter can be stored at the back of the charging base **A23**.

USING THE VACUUM CLEANER

Upright vacuum cleaner

- You may use the vacuum cleaner for vacuuming various types of floor coverings such as for example hard floor coverings, carpets, etc.
- Hold the vacuum cleaner by the handle **A1** and pulling it upwards, remove it from the charging base **A23**. After removing it from the charging base **A23**, the vacuum cleaner should be secured in the vertical parking position. After releasing it from the parking position, the handle may be moved in the vertical direction.
- Start the vacuum cleaner by pressing button **A2**. Use the button **A3** to regulate the suction power of the vacuum cleaner.
- If you need to use the vacuum cleaner in the difficult-to-access places, e.g. under the chair, press the bend button **A11**. The handle **A1** will be released from the bend and you can easily vacuum in such place. Release the button **A11** and carefully place the handle into the upright position till you hear a click sound.
- When you have finished using the vacuum cleaner, press the button **A2** to turn it off. Clean it according to the instructions in chapter "Cleaning and maintenance" and allow it to charge according to the instruction in chapter "Charging the vacuum cleaner".

Hand vacuum cleaner

- To release the hand vacuum cleaner **A8** from the vacuum cleaner body, press button **A5** and the upper part of the hand vacuum cleaner will be released. Hold the hand vacuum cleaner **A8** by the handle **A6** and carefully take it out from the vacuum cleaner body.
- Press button **A15** to turn on the hand vacuum cleaner. Use the button **A14** to regulate the suction power of the hand vacuum cleaner. The hand vacuum cleaner **A8** is suitable for vacuuming locally soiled floor coverings, furniture, etc.
- For more comfort vacuuming, e.g. furniture, attach the multi-purpose brush nozzle **A28** to the hand vacuum cleaner **A8**. Use the slide control **A29** to pull out and hide the brush.
- When you have finished using the vacuum cleaner, press the button **A15** to turn it off. Clean it according to the instructions in chapter "Cleaning and maintenance" and allow it to charge according to the instruction in chapter "Charging the vacuum cleaner".



Note:

The LED indicators **A16** signal the battery power level. The individual LED indicators will turn off as the battery gradually discharges. If it is discharged fully, one LED indicator will flash, and the vacuum cleaner will stop running.

CLEANING AND MAINTENANCE

- Before cleaning, always make sure that the vacuum cleaner is turned off and the power adapter is disconnected from the power socket. We recommend running the cleaning and maintenance after each use to prolong the lifetime of your vacuum cleaner.



Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any other liquid.

Dust container and filters

- If you use the upright vacuum cleaner, at first, it is necessary to remove the hand vacuum cleaner **A8** from the vacuum cleaner body by pressing the release button **A5**.
- Press the button **A17** to release the dust container **A20** from the hand vacuum cleaner **A8**. Place the dust container **A20** above the dust bin and press the button **A21** to open the bottom cover of the dust container **A20** – see picture G. Remove all contents of the dust container **A20**. Then close the cover.
- Now, remove the external filter **A18** by holding the side holders and then remove the internal filter **A19**.
- Rinse the dust container **A20** and thoroughly wipe dry.
- Remove dust and dirt from the internal filter **A19** and if necessary, wash it under a gentle current of running water and allow it to dry.
- Shake out dust and dirt from the external filter **A18** over the dust bin. If necessary, you can take out the soft foam part of the filter and wash it under a gentle current of running water and allow it to dry.



Warning:

Before assembling the vacuum cleaner, make sure that all its parts are completely dry. Prior to starting it, make sure that all the filters are properly installed in their place. Otherwise, this could damage the vacuum cleaner. When the filters are soiled, their effectiveness is reduced, so do not neglect their cleaning.

- After 6 months of use, we recommend replacing the internal filter **A18** for a new one. Spare filters are available at brick or mortar, and online stores.

Cutting off hair from the rotary brush

- The vacuum cleaner is provided with the automatic cut-off hair feature from the rotary brush.
- Place the vacuum cleaner to the parking position and insert it into the charging base **A23**. Ensure the power adapter **A25** is plugged in the power socket. Carefully, by tip of your foot, press and hold the step-in area **A9** on the floor nozzle **A10** for about 10 seconds. The charging process will be interrupted, and it will automatically cut off the jammed hair from the rotary brush and it will vacuum them as well. Release your foot from the step-in area **A9** and the charging process will be recovered.
- At the bottom part of the charging base **A23**, there is a dust compartment **A27** where the knife is stored, and at the same time, it serves to catch dirt that do not have to be vacuumed after cutting of hair from the rotary brush. Remove the vacuum cleaner from the charging base **A23** and unplug the connector of the power adapter **A25** from the charging base **A23**. Turn the charging base **A23** upside down, release the latches of the dust compartment **A27** and remove the cover. Empty the content of the compartment **A27** into the dust bin. Place the cover back and press it till you hear a click sound of the latches.

**Warning:**

Never insert fingers into the compartment at the bottom part of the charging base **A23**. Avoid contact with the knife. The knife is very sharp and there is risk of injury when mishandled.

Floor nozzle and attachments

- If the rotary brush is soiled, remove the floor nozzle **A10** from the vacuum cleaner body by pressing the button **A12**. Turn it so that the rotary brush is pointing upwards. On the left side of the nozzle **A10**, there is a latch that secures the brush cover in place. Release the latch, tilt open the cover and take out the brush – see picture I.
- Remove all dirt and dust from the rotary brush and the internal space of the floor nozzle **A10**. After cleaning, return the rotary brush back in its place. Tilt the cover back and secure in place.
- For cleaning the surface of the floor nozzle **A10** and the attachments **A28** and **A30** use a dry or a lightly dampened cloth. Then wipe everything so that it is thoroughly dry.

Outer surface of the vacuum cleaner

- Clean the outer surface of the vacuum cleaner using a dry or a lightly dampened cloth. Then wipe everything so that it is thoroughly dry. Clean the charging base **A23** using a dry or a lightly dampened cloth, whilst ensuring that the sockets for connection the connector of the power adapter **A25** do not come in contact with moisture.

**Warning:**

Do not use steel wool, abrasive cleaning products, solvents, etc. to clean the vacuum cleaner.

Storage

- When not using the appliance for an extended period, clean it according to the instructions in chapter “**Cleaning and maintenance**”.
- Remove the battery **A31** from the hand vacuum cleaner **A8**.
- Ensure the vacuum cleaner and all its accessories are thoroughly clean and dry.
- To save place, you can fold the hand **A1**. In such case, press and hold the bend button **A11** and fold the handle **A1** backwards – see picture H.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.


Troubleshooting

- If the vacuum cleaner cannot be turned on, ensure the battery is fully charged.
- If the vacuum cleaner loses the suction power, check whether the suction hole is not block by a foreign object, or empty the dust container **A20**.

TECHNICAL SPECIFICATIONS**Power adapter**

Input..... 100 – 240 V ~, 50/60 Hz, 0,8 A
Output..... 25 – 29 V  800 mA
Electric shock protection class..... II

Vacuum cleaner

Power input..... 150 W
Electric rotary brush..... 10 W
Li-Ion battery..... 25,2 V  Li-Ion / 2000 mAh
Time required for charging to full capacity..... approximately 3 hours
Operating time when fully charged (high / low power)..... 25 min / 55 min
Noise level..... 82 dB(A)
Dust container capacity..... 0,5 l

The declared noise emission level of this appliance is 82 dB(A), which represents level A of acoustic power with respect to a reference acoustic power of 1 pW.

We reserve the right to change text and technical specifications



Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.



The appliance is intended for household use only. The appliance is not intended to be used outdoors.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING**MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it

DISPOSAL OF BATTERIES

Prior to disposing of the product or handing it over at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Before removing the battery, it is necessary to start the vacuum cleaner and wait until it is completely flat. Battery removal will be performed at the authorised service centre.

The battery contains environmentally damaging substances and therefore does not belong in standard household waste. Their correct disposal will be performed by the respective collection facility.