

User Manual

# X-style 33 Steel



We thank you for buying mobile phone X-style 33. Given manual includes description of main mobile phone functions .

The phone X-style 33 allows to use 2 SIM cards of GSM standard at dual standby mode, i.e., in standby mode there are 2 cards in the connection; during the call 1 card works in active mode, 1 other card are unavailable.

*The content of given manual is right. The description of some functions may differ due to changes in software or provider services. The company keeps the right to arrange changes in technical specifications without previous warning.*

*Key remarks in security technics.*

Given phone is assigned for calling and receiving calls, sending SMS messages, surfing the Internet (may be unavailable) etc.

Read carefully the below section and strictly keep following instructions.

The phone doesn't contain any materials harmful for health.

- Don't use the phone during the thunderstorm in the open air.
- Keep the battery off from high temperature, explosive and flammable liquids.
- Power the phone off in case if using the phone can cause the obstacle or danger.
- Do not put the prone in heating devices such as microwave oven, hot plate or heater.

- Do not try to open the mobile phone's case. If phone or any of accessories do not work properly, please contact the closest authorized service center.
- Use only accessories and charging devices assigned to this model. Do not use defective or second hand chargers.
- Do not let the battery short circuit happen.
- If you use any personal medical devices, please clarify from producer whether device has sufficient protection from radiation in radio-spectrum. Power the phone off in medical institutions if it is required with inner regulation rules.
- Do not use the phone during driving. Follow mobile phone using recommendations while driving.
- Keep the phone, all its components and accessories in a place unavailable for kids and pets. They may damage the device or accidentally choke with small details.
- Avoid contacting phone with water.
- Do not use potent chemicals, dissolvent or bleaches for cleaning the phone.
- Do not subject the device under the effect of direct sun rays.
- To avoid getting heavy metals, acids, chemicals in water or ground what cause significant damage to environment, wasted accumulator battery should be utilized after end of service term in accordance to the law regulations. Juristic responsibility occurs in case of failure to comply with legislation.

Data about safe utilization of lithium-ion batteries may be obtained in the closest specialized service center.


## Specifications

Phone	2 SIM (mini-SIM) GSM: 850/900/1800/1900 MHz
Messages	SMS
Mob. Internet	GPRS
Display	2,8", colour LCD, 240x320 pix
Camera	0,3 Mpx
Supporting formats	MIDI, AAC, MP3, WAV, JPG
FM-radio	87,5-108,0 MHz (built-in antenna)
Micro-SD	till 32 Gb
Battery	Li-Ion, 1000 mAr

Package includes:

- Mobile phone
- Battery
- Charging device
- USB-micro-USB cable
- User manual
- Warranty card

**Phone buttons.**

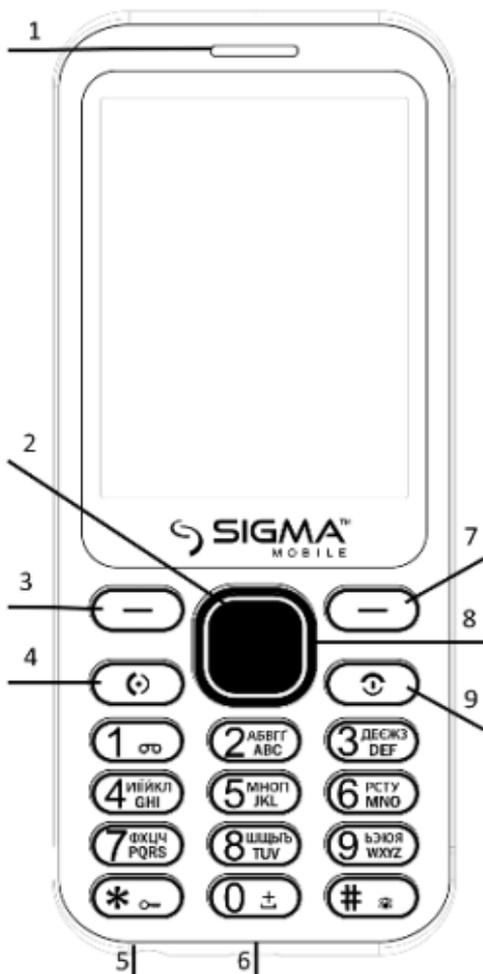

1	Front dynamic
2	Central (OK) key
3	Left soft button


4	Calling\receiving call
5	Audio port (3.5mm)
6	microUSB port
7	Right soft button
8	Navigation buttons.
9	Rebound\Cancel\ (long pressing - to power on or power off phone)

## Keys specification

0-9	<p>When dial a number, enter corresponding number.</p> <p>In input mode, enter different characters according to input mode, like letter or number.</p> <p>In text edit mode, press # to select input language or mode, * to input special symbols. Press and hold 2-9 – for speed dial. Press and hold 0 – for on/off torch.</p>
* key	<p>When dial a number, press to enter “*”.</p> <p>In idle mode, press * key, cyclically shows “*”, “+”, ” p”, ” W” .</p> <p>Press left soft key then press * key to lock/unlock keypad.</p> <p>In input mode, enter punctuation.</p>

# key	In idle mode, long press # activate or deactivate silent profile. When dial a number, press to enter “#” .
Left soft key	Perform the functions indicated on the left bottom line of the display. Press left soft key then press * key to lock/unlock keypad.
Right soft key	Perform the functions indicated on the right bottom line of the display. Press right soft key to return to upper menu. In idle mode, press right soft key to access Phonebook menu.
Central Key	Menu / OK. Press and hold in standby mode - Enable / Disable Torch

## Inserting SIM cards and memory card

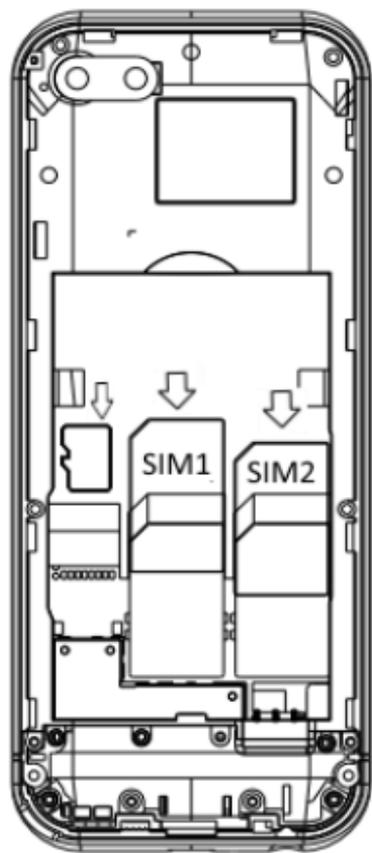

Open the back cover.

Insert SIM cards in proper device slots.

Insert also micro-SD card, if required.

Insert battery, controlling that battery contacts fit phone contacts.

*Be careful, broken card or batteries cards lead to device breakage and cancelling warranty.*

Close back cover.

Power on the phone long pressing button 9 (red handset).

It is recommended to arrange full battery charge before first use.

### Conditional screen marks on phone

	Connection signal
	Battery charge indicator
	New message

	Missed call
	Silence profile activated
	Outdoor profile activated
	Meeting profile activated
	Alarm clock is active
	Bluetooth switched on
	GPRS Internet is active
	Keyboard locked

### Power on\off the device

To power on the device press and keep button «power» until activation of device display.

To power off press and keep button «power» until shutdown.

Device locking occurs automatically, or after consequent pressing left soft button and button «\*». Unlocking occurs through consequent pressing left soft-button and button «\*».

## Calling

To call - dial number on digital keyboard in local or international format, or choose number from phone contacts list, and press calling button. Choose from which SIM-card to call. To cancel call - press button 'cancel'.

During call it is also possible to: switch volume in a speakerphone mode, start conversation record, add more persons to conference conversation, turn off\switch on microphone and etc.

## Main menu

To access the main device menu you need to press left soft-button or central navigation button.

Menu includes following section:

**Phonebook:** phone book including phone, SIM cards storage;

**Messaging:** to send SMS messages and read received messages;

**Calls:** incoming, outgoing and missed calls register;

**Setting:** Phone settings, dual SIM settings, security settings, network settings, connectivity and Restore settings

**Audio player:** The audio player launches in a separate menu

**Multimedia:** device media-functions are concentrated in this menu: Camera, Gallery, Video recorder, Video player, sound recorder, FM radio

## Fun & games

**User profiles:** settings volume profiles

**File manager:** to manage files

**Organizer:** Calendar, E-reader, Alarm, Torch, Calculator

**Services:** Internet Browser, SIM toolkit

## Contacts

The Contacts menu is your phone book, which contains contacts stored in the phone and on SIM cards. The phone memory is designed to store 500 contacts.

Contacts are in alphabetical order. The search string allows you to find contacts, the search is organized by the first letters of the name of the contact. To switch the method / language of the search press the # key

**New contact:** Add a new contact. Before creating, you have to choose a place to save the contact.

To view the contact, select the cursor and press the center navigation key.

For a call, press the call button.

Additional options open with the left soft key.

**Send SMS :** Create and send a text or multimedia message to a contact.

**Edit:** edit the contact

**Delete:** delete the selected contact.

Copy: Copy contact between phone and SIM card.

Add to blacklist.

Select multiple: select multiple contacts for further copying / deleting / grouping SMS.

It is also possible to: view the status of the memory, and delete all contacts, make backups or restore contacts (only if there is a memory card)

*When backing up contacts in the root of the memory card, a system file named ~vcard.vcf is created. When restoring contacts, information is taken from the same file.*

Adding a new contact: Choose "New" in the options, choose a place to save the contact, enter a name and phone number, press "options-save"

For one contact, you can add the following information: Name (line length - 20 characters), Phone number, Caller picture, Caller Ringtone

## **Messaging**

This menu contains everything you need to send, store, view and delete SMS messages.

New SMS: Select to write and send (or save) a new message.

Inbox: Folder with received messages.

Outbox: Folders with sent messages.

Drafts: incomplete messages.

**Sent:** Messages that have been sent.

**Settings:** settings for sending SMS

The Settings menu allows you to set the SMS center numbers for both SIM cards, set the validity period of the message, configure receipt of the delivery status report, adjust the settings for saving messages, switch off or enable push messages.

## **Calls**

«Calls» menu contains incoming, outgoing and missed calls register, counter GPRS traffic and allows: dial contact number, send SMS-messages, add new number to contacts, add number to black list, delete information about call and etc.

## **Settings**

*Phone:* contains date and time settings, interface languages, settings of shortcuts buttons and dedicated keys. Display: wallpaper settings, screen and backlight timeout.

*Security:* set up SIM-card lock, phone lock and lock of special phone functions. Blacklist management is in this menu as well.

*Network:* allows to set up GPRS, choose card to transmit data by default, set up network accounts.

*Connectivity:* allows to set up data accounts.

*Reset settings.* Lets you reset your phone to factory settings.

*WARNING. Reset code 1122*

## **Audioplayer**

The audio player is intended for listening to music files. To play / pause, press the center key. To move to the next / previous file - Right / Left. To create a playlist, copy the music files to the memory card in the My music folder. To change the settings, go to List-Options – Settings

## **Multimedia**

*Caution: It is desirable to use the following functions in the menu "Multimedia" under the condition of the installed memory card.*

This section contains applications for working with photos, videos and sound.

Camera - to shoot a photo

Image viewer - to view images.

Video recorder - for recording videos.

Video player - to view video clips.

Sound recorder - for recording sound.

FM radio. To listen to radio stations

**NB!** *FM radio uses built-in antenna. The sound of the FM radio and audio player is transferred to the external speaker or wired headset.*

To turn on / off, press the center key. To search for radio stations, press Right / Left. To fine tune the channel frequency - Up / Down. Use the \* (to decrease) and # (to increase) to adjust the volume. The Options menu has the ability to automatically and manually search channels, view saved stations, record files in a file and enable / disable background playback.

### **User Profiles:**

This menu is assigned for setting sound profiles, i.e. volume characteristics, ringtones, vibrate mode, button sound and systems for different conditions of phone using, such as: outdoor, meeting, silent and etc.

Built-in settings are editable as well as custom settings may be created.

To activate settings choose profile in menu and press central button.

### **File manager**

File manager allows to work with files in phone memory and in memory card. Following operations are available: copying, moving, deleting, creating files, or setting melodies as phone ringtones.

### **Organizer**

The following programs are available in this menu:

Calendar - for viewing calendar. It is possible to create / edit / view events

Calculator - for arithmetic calculations.

E-book – for reading texts in TXT format (UNICODE txt files).

**NBI** Files with books must be on the memory card in the EBOOK folder

Alarm - allows to set few alarms simultaneously.

Torch on/off

## Troubleshooting

Following recommendations may help to solve some problems with phone independently. In case problems occurs try to solve it yourself with following recommendations. If problem is not solved, contact to Sigma mobile service center.

Check whether battery is charged and whether problem continues after device reset.

Try to restore factory settings through menu «Settings - phone – Default settings» (password by default – 1122)

Problems with memory card mostly occurs in case of memory card breakage. Thus, firstly check given card separately. Also recommended to: take off and insert memory card in port, check whether card is put in port correctly, reload phone.

Phone does not power on: check battery charge, repeatedly connect charging device, and wait at least 10 minutes. Press

and keep the button «Power on» not less than 5 second. If device does not power on contact in service center.

Battery discharges rapidly: reasons for increased battery charges may be: low air temperature, active using of media programs, huge distance to cellular tower of connection operator.

Battery does not charge: check charging adapter connection to plug. Use only complete charging adapter and cable.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrect input of contact number, activated function of calling prohibition. Try to change location, check level of connection signal, wipe phone to factory reset. Contact in service center.

Low receiver volume: during conversation, press button «up» to increase volume. Set volume during conversation in profiles. Check signal of cellular connection.

## **Passwords**

Requests to input following passwords may occur during activating and phone use :

Phone password: request occurs during activating. This is the password of general locking.

PIN-code: if Pin-code checking is active, it is required to input code which is given with SIM-card.

PUK code, PIN2 code - also given with SIM card.

Be careful installing blocking passwords: if they are lost, to renew phone functionality is possible only in service center.