

We thank you for buying mobile phone X-style 351. This manual includes description of main mobile phone functions .

The phone X-style 351 allows to use 2 SIM cards of GSM standard at dual standby mode, i.e., in standby mode there are 2 cards in the connection; during the call 1 card works in active mode, 1 other card are unavailable.

The content of this manual is right. The description of some functions may differ due to changes in software or provider services. The company keeps the right to arrange changes in technical specifications without previous warning.

Key remarks in security technics.

Given phone is assigned for calling and receiving calls, sending SMS messages, surfing the Internet (may be unavailable) etc.

Read carefully the below section and strictly keep following instructions.

The phone doesn't contain any materials harmful for health.

- Don't use the phone during the thunderstorm in the open air.
- Keep the battery off from high temperature, explosive and flammable liquids.
- Power the phone off in case if using the phone can cause the obstacle or danger.
- Do not put the prone in heating devices such as microwave oven, hot plate or heater.
- Do not try to open the mobile phone's case. If phone or any of accessories do not work properly, please contact the closest authorized service center.

- Use only accessories and charging devices assigned to this model. Do not use defective or second hand chargers.
- Do not let the battery short circuit happen.
- If you use any personal medical devices, please clarify from producer whether device has sufficient protection from radiation in radio-spectrum. Power the phone off in medical institutions if it is required with inner regulation rules.
- Do not use the phone during driving. Follow mobile phone using recommendations while driving.
- Keep the phone, all its components and accessories in a place unavailable for kids and pets. They may damage the device or accidentally choke with small details.
- Avoid contacting phone with water.
- Do not use potent chemicals, dissolvent or bleaches for cleaning the phone.
- Do not subject the device under the effect of direct sun rays.
- To avoid getting heavy metals, acids, chemicals in water or ground what cause significant damage to environment, wasted accumulator battery should be utilized after end of service term in accordance to the law regulations. Juristic responsibility occurs in case of failure to comply with legislation.

Data about safe utilization of lithium-ion batteries may be obtained in the closest specialized service center.

Specifications

| | |
|----------|--|
| Phone | 2 SIM (microSIM+nanoSIM) GSM: 850/900/1800/1900 MHZ |
| Messages | SMS |

| | |
|--------------------|-----------------------------------|
| Display | 3.5'', color LCD, 320x480 pix |
| Camera | 0,3 Mpx |
| Bluetooth | V3.0 |
| Supporting formats | MIDI, AAC, MP3, WAV, JPG |
| FM-radio | 87,5-108,0 MHz (built-in antenna) |
| Micro-SD | till 32 Gb |
| Battery | Li-Ion, 3400 mAh |

Package includes:

- Mobile phone
- Battery
- Charging device
- Cable USB—microUSB
- Headset
- User manual
- Warranty card

Phone buttons.




| | |
|---|------------------------|
| 1 | Receiver |
| 2 | Left soft key (LSK) |
| 3 | Central (OK) key |
| 4 | Calling\receiving call |

| | |
|----|--|
| 5 | Audio port (3.5mm) |
| 6 | microUSB port |
| 7 | Right soft key (RSK) |
| 8 | Navigation buttons. |
| 9 | Rebound\Cancel\End call (long pressing - to power on or power off phone) |
| 10 | Torch |
| 11 | Speaker |
| 12 | Camera |
| 13 | Flash light |

Keys specification

| | |
|----------------|---|
| 0-9 | When dial a number, enter corresponding number. In input mode, enter different characters according to input mode, like letter or number. Press and hold 2-9 – for speed dial. Press and hold 0 – for on/off torch. |
| * key | To enter the characters *, +, w, p. Press LSK and * alternately to lock / unlock the keypad. |
| # key | In idle mode, long press # activate or deactivate silent profile. When dial a number, press to enter “#”. |
| Left soft key | Perform the functions indicated on the left bottom line of the display. Press left soft key then press * key to lock/unlock keypad. |
| Right soft key | Perform the functions indicated on the right bottom line of the display. Press right soft key to return to upper menu. In idle mode, press right soft key to access Phonebook menu. |
| Central Key | Menu / OK. |

Inserting SIM cards and memory card

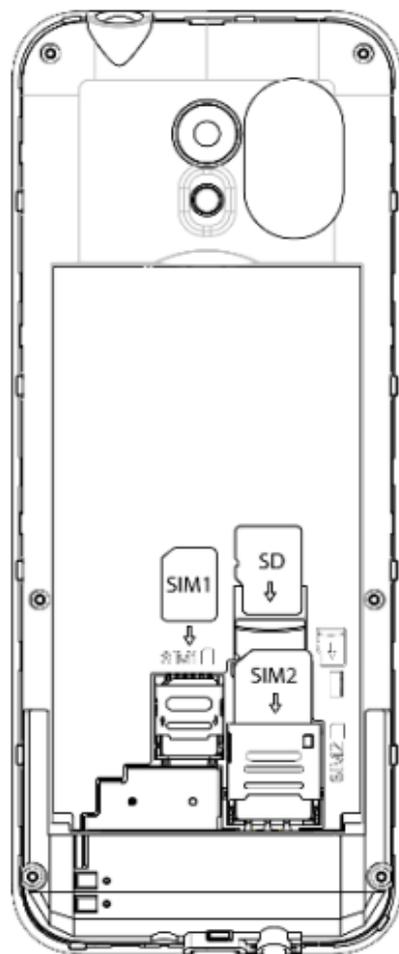

Open the back cover.

Insert SIM cards in proper device slots.

Insert also micro-SD card, if required.

Insert battery, controlling that battery contacts fit phone contacts.

Be careful, broken card or batteries cards lead to device breakage and cancelling warranty.

Close back cover.

Power on the phone by press and hold Cancel button.

It is recommended to arrange full battery charge before first use.

Conditional screen marks on phone

| | |
|---|---------------------------|
|  | Connection signal |
|  | Battery charge indicator |
|  | New message |
|  | Missed call |
|  | Silence profile activated |
|  | Outdoor profile activated |
|  | Meeting profile activated |
|  | Alarm clock is active |
|  | Bluetooth switched on |
|  | GPRS is On |
|  | Keyboard locked |

Power on/off the device

To power on the device press and hold Cancel button until activation of device display.

To power off press and hold Cancel button until shutdown.

Device locking occurs automatically, by pressing the Cancel button (if enabled) or after consequent pressing left soft button and button «*». Unlocking occurs through consequent pressing left soft-button and button «*».

Calling

To call - dial number on digital keyboard in local or international format, or choose number from phone contacts list, and press calling button. Choose from which SIM-card to call. To cancel call - press Cancel button.

During call it is also possible to: switch volume in a speakerphone mode, start conversation record, add more persons to conference conversation, turn off\switch on microphone and etc.

Home screen

In the standby mode, the home screen displays information about the installed SIM cards, date and time, schedule for the current day, information about the audio or radio station being played, and shortcuts. To move on the home screen, use the Up/Down keys, to move between the shortcuts - the Right/Left keys, to move to the desired item - the center key.

Main menu

To access the main device menu you need to press left soft-button.

Menu includes following section:

Call history: incoming, outgoing and missed calls register;

Messaging: to send SMS messages and read received messages;

Phonebook: phone book including phone, SIM cards storage;

Calendar

Multimedia: device media-functions are concentrated in this menu: Video recorder, Video player, sound recorder, FM radio

Camera

Image

Audioplayer

Settings: settings of phone, screen, SIM-cards, network, security, sound profiles, restore factory settings.

Clock: world time, alarm clock, stopwatch, timer

Organizer: JAVA, Torch, Ebook, Alarm, Calculator

My files: file manager to manage files

Opera mini

Services

Bluetooth

STK

Call history

Call history menu contains a register of incoming, outgoing and missed calls and allows you to: view information, dial a contact number, send an SMS message, add a new number to contacts, add a number to the black list, delete call information and more.

Messaging

This menu contains everything you need to send, store, view and delete SMS messages.

Write message: Select to write and send (or save) a new message.

Inbox: Folder with received messages.

Outbox: Folders with sent messages.

Drafts: incomplete messages.

Sentbox: Messages that have been sent.

Security inbox: folder for storing confidential messages. You must enter a password to access it.

To go to Settings, press Options — Settings. The Settings menu allows you to set the SMS center numbers for both SIM cards, set the validity period of the message, configure receipt of the delivery status report, adjust the settings for saving messages, switch off or enable push messages.

Contacts

The Contacts menu is your phone book, which contains contacts stored in the phone and on SIM cards. The phone memory is designed to store 500 contacts.

Contacts are in alphabetical order. The search string allows you to find contacts, the search is organized by the first letters of the name of the contact. To switch the method / language of the search press the # key

Creating a new contact. Press Options - New. Before creating, you must select where to store the contact. You can add the following data for one contact: Name (line length - 30 characters), 4 phone numbers, e-mail, Icon, Ringtone, Note, Group

To view and edit the contact, select the cursor and press the center navigation key.

For a call, press the call button.

Additional options open with the left soft key.

Write message: Create and send a text or multimedia message to a contact.

Delete: delete the selected contact.

Copy: Copy contact between phone and SIM card.

Add to Whitelist.

It is also possible to: view the status of the memory, and delete all contacts, make backups or restore contacts (only if there is a memory card)

When backing up contacts, a file named vcard.vcf is created. When restoring contacts, the information is taken from the same file.

Calendar

The Calendar application is made in a separate menu. It is possible to create / edit / view events.

Multimedia

Note: It is recommended to use the Multimedia functions (Camera, Camcorder, Audio player, Voice recorder, etc.) if a memory card is inserted.

This section contains applications for working with photos, videos and sound.

DV (Video recorder) - for recording videos.

Video player - to view video clips.

Sound recorder - for recording sound.

FM radio - to listen to radio stations

NBI *FM radio uses built-in antenna. The sound of the FM radio and audio player is transferred to the external speaker or wired headset.*

To turn on / off, press the center key. To search for radio stations, press Right/ Left. Use the Down key (to decrease) and Up key (to increase) to adjust the volume. The Options menu has the ability to automatically and manually search

channels, view saved stations, record in a file and enable/disable background playback.

Camera

Camera application for taking photos. Use the center key to shoot, the Up/Down keys to zoom, the Right/Left keys to go to camera settings: photo/video switch, flash mode selection, photo size selection, night mode on, and more. To go to the photo album and additional settings, press Options, to exit the application, press Back.

Image

Your photo gallery. When viewing photos, you can: set the photo as a background, as a contact icon, transfer via Bluetooth, delete. It is also possible to view photos in slide show mode.

Audio player

Audio player – the audio player is intended for listening to music files. To play / pause, press the center key. To move to the next / previous file - Right / Left. To create a playlist, copy the music files to the memory card in the My music folder. To change the settings, scroll to Options — Settings, to add playlists, Options — Playlist. To exit the application, scroll to Options — Exit

Settings

Phone: contains date and time settings, interface language, scheduled on / off settings, power saving mode settings. Also, this menu allows you to reset to factory settings. *Note*: Reset code - 1122

Display: wallpaper settings, screen and backlight timeout.

Security: Provides the ability to configure SIM card lock, phone lock, automatic key lock and lock certain phone

features (privacy). This menu also contains the White and Black List control menu.

Call settings. The menu allows you to set the number of active SIM cards, divert options, call barring, autodial, call auto-recording and more.

Profiles. This menu is assigned for setting sound profiles, i.e. volume characteristics, ringtones, vibrate mode, button sound and systems for different conditions of phone using, such as: outdoor, meeting, silent and etc. Built-in settings are editable. To activate settings choose profile in menu and press central button.

Connections: allows you to configure GPRS, specify a default data transfer card, set up an account for data transfer, select the network selection method - manual or automatic.

Clock

Functionality is available in this menu:

Alarm clock - you can set up to 6 alarm clocks, Stopwatch, Timer, World clock

Organizer

The following programs are available in this menu:

Calculator - for arithmetic calculations.

Games

Java. The phone supports the installation and use of Java applications. In this application you can view installed programs, install new ones and more.

E-book reader – for reading texts in TXT format (UNICODE txt files). **NB!** Files with books must be on the memory card in the EBOOK folder

Torch on/off

My Files

File manager allows to work with files in phone memory and in memory card. Following operations are available: copying, moving, deleting, creating files, or setting melodies as phone ringtones.

Opera mini

An application for internet surfing

Note! *It is advisable to install a memory card for the application to work properly. The first launch may be longer than usual due to the installation of the program, do not turn off the phone screen until the application is fully installed and launched.*

Bluetooth

Application for managing Bluetooth devices: connect, view, disconnect, set up storage location for files received via Bluetooth

Troubleshooting

Following recommendations may help to solve some problems with phone independently. In case problems occurs try to solve it yourself with following recommendations. If problem is not solved, contact to Sigma mobile service center.

Check whether battery is charged and whether problem continues after device reset.

Try to restore factory settings through menu «Settings - phone – Default settings» (password by default – 1122)

Problems with memory card mostly occurs in case of memory card breakage. Thus, firstly check given card separately. Also recommended to: take off and insert memory card in port, check whether card is put in port correctly, reload phone.

Phone does not power on: check battery charge, repeatedly connect charging device, and wait at least 10 minutes. Press

and keep the button «Power on» not less than 5 second. If device does not power on contact in service center.

Battery discharges rapidly: reasons for increased battery charges may be: low air temperature, active using of media programs, huge distance to cellular tower of connection operator.

Battery does not charge: check charging adapter connection to plug. Use only complete charging adapter and cable.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrect input of contact number, activated function of calling prohibition. Try to change location, check level of connection signal, wipe phone to factory reset. Contact in service center.

Low receiver volume: during conversation, press button «up» to increase volume. Set volume during conversation in profiles. Check signal of cellular connection.

Passwords

Requests to input following passwords may occur during activating and phone use:

Phone password: request occurs during activating. This is the password of general locking. Password by default is 1122.

PIN-code: if Pin-code checking is active, it is required to input code which is given with SIM-card.

PUK code, PIN2 code - also given with SIM card.

Be careful installing blocking passwords: if they are lost, to renew phone functionality is possible only in service center.