

# Hair Dryer

User's manual

EN



**SENCOR®**

SHD 108VT

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep the manual for future use.

Save the original shipping transport box, packaging material, receipt and warranty card for the duration of the warranty. In the event of transportation, pack the appliance using the original packaging materials only.


EN-1

## CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	3
DESCRIPTION OF THE HAIR DRYER .....	6
USING THE HAIR DRYER.....	6
CLEANING AND MAINTENANCE.....	7
TECHNICAL SPECIFICATIONS .....	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS .....	8
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	8

## **IMPORTANT SAFETY INSTRUCTIONS**

This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Do not allow children to play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.

 Do not use this appliance near baths, showers, washbasins or other containers containing water.

If you will be using the appliance in the bathroom, unplug it from the socket after use because the presence of water presents a hazard even when the appliance is turned off.


As additional protection we recommend installing a residual current device (RCD) with a nominal trigger current no higher than 30 mA. Ask the electrician for advice.

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE IT FOR FUTURE USE.

- Before connecting this appliance to the socket outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- Never use accessories, which have not been supplied with this appliance or which have not been explicitly recommended by the manufacturer.
- This appliance is designed for domestic use only. Do not use it in industrial surroundings or outdoors.
- Do not spray the appliance with water or any other liquid. Do not submerge it in water or in any other liquid.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
- Do not place the power cord near hot places or over sharp objects. Do not place heavy items on the power cord. Position the power cord so that it will not be stepped on or tripped over.
- Ensure that the inflow and outflow openings are not blocked while the appliance is running. If any of the openings become blocked, the appliance will shut down automatically. Disconnect it from the power socket and allow it to cool down for several minutes. Remove the obstacle blocking the inflow or outflow of air before turning the appliance on again.
- Disconnect the appliance from the power socket after every use.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling out the plug of the power cord.
- If the power cord is damaged, have it replaced at an expert service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.

## DESCRIPTION OF THE HAIR DRYER

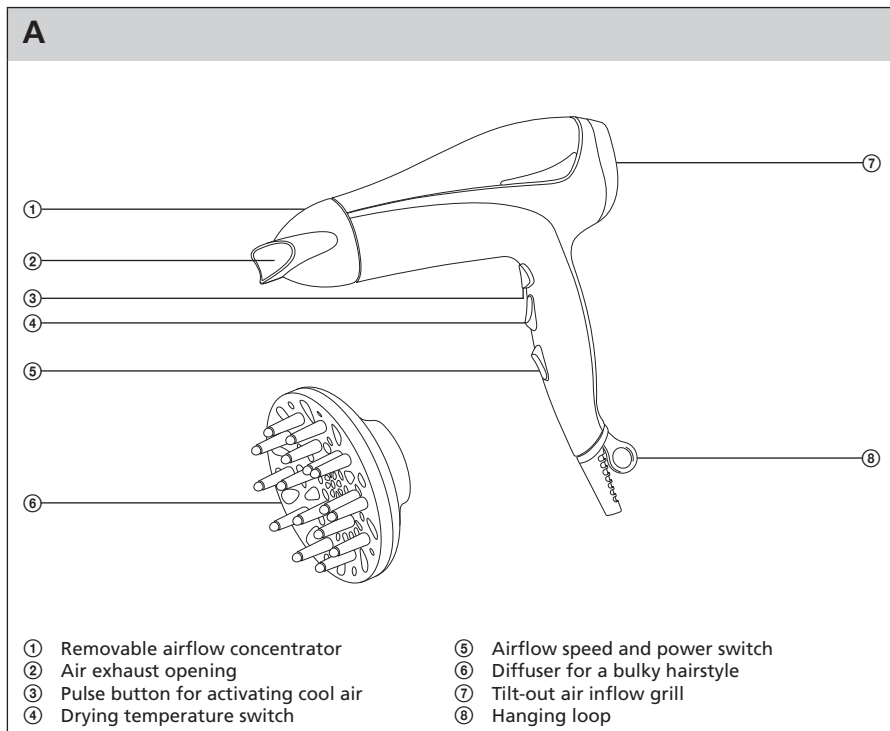

## USING THE HAIR DRYER

- 1) Wash your hair using a shampoo and treat it with a conditioner before using the hair dryer; this will make combing easier. Dry washed hair using a towel and comb it out.
- 2) Select attachment A① or A⑥ and attach it to the hair dryer.  
Attachment A① can be used for quickly drying hair or for hairstyling. When hairstyling, comb through your hair using a brush or comb and point attachment A① at the hair strand you are working on.  
Use attachment A⑥ to give volume to your hairstyle. When drying your hair, it is necessary for the prongs of the diffuser A⑥ to point perpendicular to your head and to be touching your scalp. Using slow circular motions, gradually dry all parts of your hair.
- 3) Insert the power plug into the an electrical power socket. Use switches A⑤ and A④ to set airflow speed and drying temperature.

# Hair Dryer

SHD 108VT

EN

## Setting switch A<sup>⑤</sup> Airflow speed

- |   |  |
|---|--|
| 0 | Hair dryer is turned off.                                |
| 1 | Gentle air flow setting is used for gradual hairstyling. |
| 2 | Fast air flow setting is used to quickly dry hair.       |

## Setting switch A<sup>④</sup> Drying temperature

- |                       |   |
|-----------------------|---|
| <input type="radio"/> | Low temperature is used to gradually dry your hair. |
| <input type="radio"/> | Middle temperature for easy hairstyling.            |
| <input type="radio"/> | High temperature is used to quickly dry your hair.  |

### Ionisation function

After starting your hair dryer, activate the ionisation function, which creates negative ions. These neutralise the static charge in your hair and give your hair shine and vitality.

To fix your hairstyle in place, press and hold the cold air button A<sup>③</sup> for several seconds.



#### Tip:

To make the hairstyle last longer, we recommended the application of special hair products, e.g. hair sprays, mousse or hair gel.

- When you finish using the hair dryer, turn it off by moving switch A<sup>⑤</sup> to position 0 and disconnect it from the power socket.

## CLEANING AND MAINTENANCE

- Before cleaning the hair dryer, always turn it off and disconnect it from the power outlet.
- Use your thumb to push down the top edge of grill A<sup>⑦</sup> and tilt grill A<sup>⑦</sup> away from the hair dryer. Remove any hair that is caught in the air inflow. Tilt grill A<sup>⑦</sup> back and carefully press it against the hair dryer until an audible click is heard. Check that grill A<sup>⑦</sup> is properly attached to the hair dryer.
- To clean the outer surface you can use a wiping cloth lightly dipped in a solution of neutral detergent. Wipe dry the surface that you wiped with the damp cloth.
- Never submerge the hair dryer in water or any other liquid. Do not use abrasive cleaning products, alcohol, petrol or similar agents.

## TECHNICAL SPECIFICATIONS

Nominal voltage range .....	220–240 V
Nominal frequency .....	50/60 Hz
Rated power input .....	1800–2200 W
Safety class (for electric shock protection) .....	II
Noise level .....	70 dB(A)

The declared noise emission level of the appliance is 70 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

### Glossary of technical terms

Safety class for electric shock protection:

Class II – Electric shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your vendor



This product meets all the basic requirements of EU directives that apply to it.