 
 
 
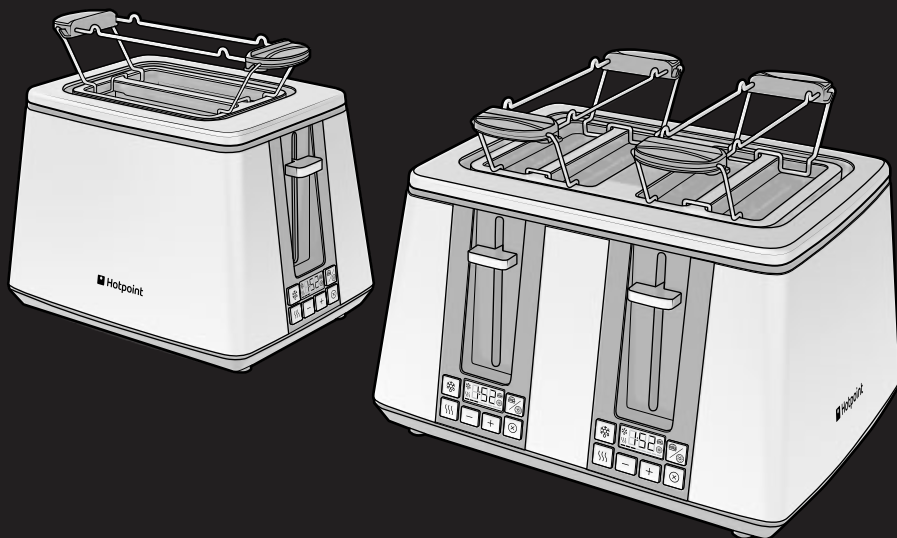 


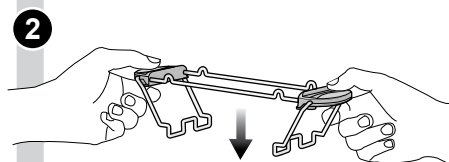


 **Hotpoint**

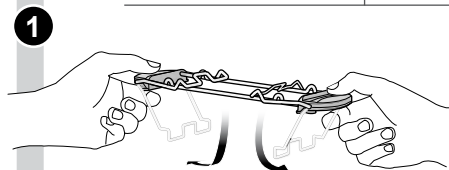

## Operating Instructions

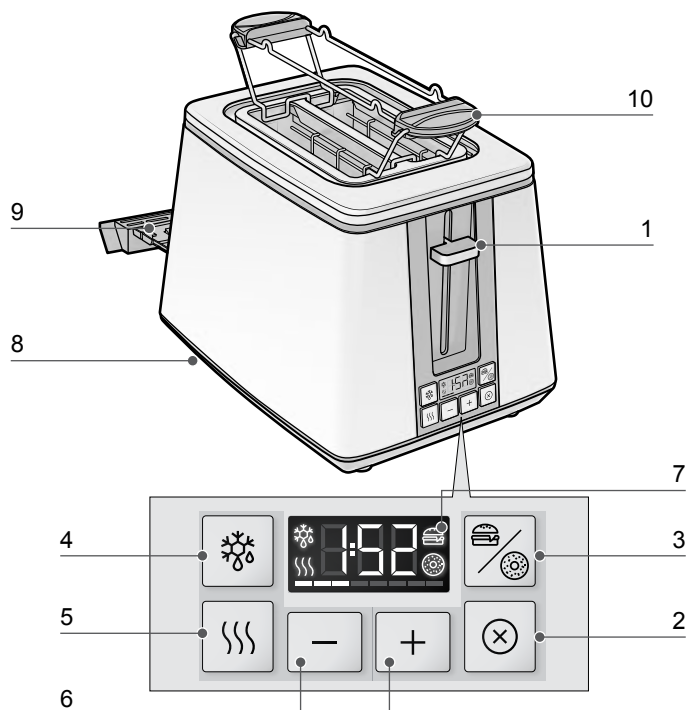


 **3**

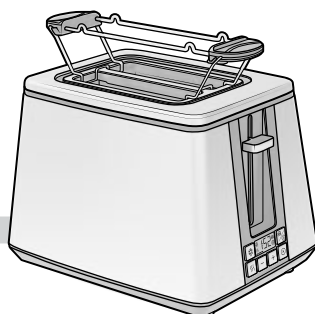


Picture 1


 
TT 22E UK

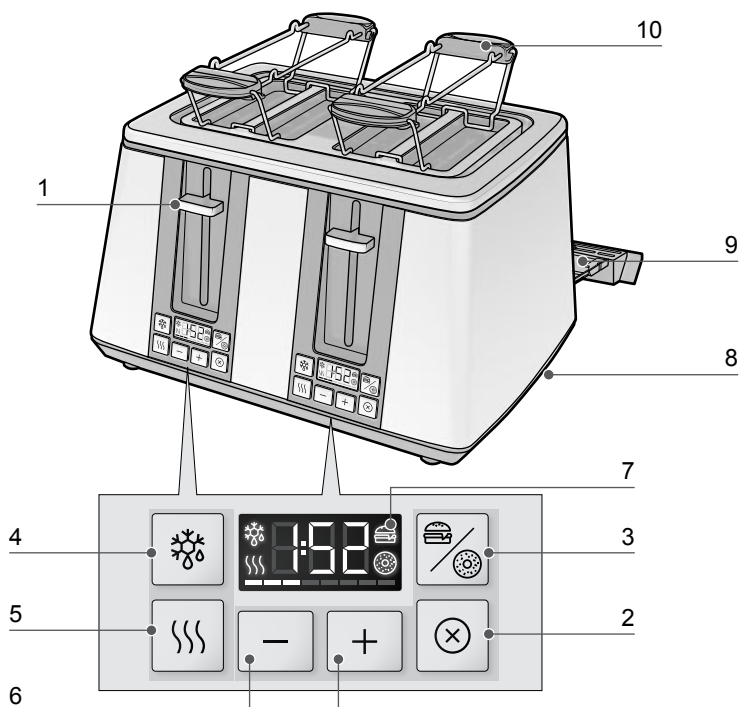


1

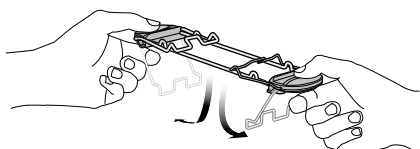 

2

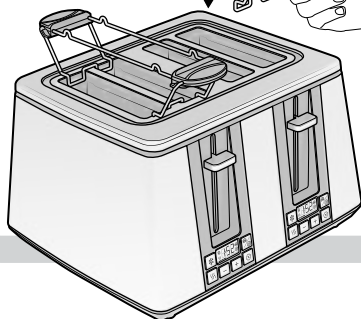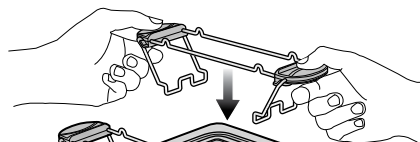  

3

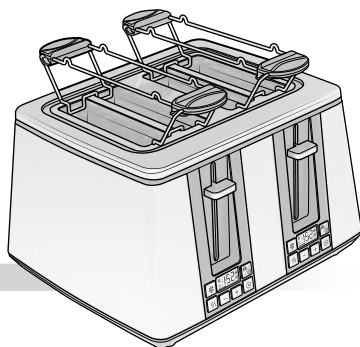 

Picture 2

TT 44E UK

## **SAFETY INSTRUCTIONS**

### **IMPORTANT TO BE READ AND OBSERVED**

- Before using the appliance carefully read Health and Safety and Use and Care guides.
- Keep these instructions close at hand for future reference.
- YOUR SAFETY AND SAFETY OF OTHERS IS VERY IMPORTANT
- This manual and the appliance itself provide important safety warnings, to be read and observed at all times
- All safety warnings give specific details of the potential risk presented and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions.
- Failure to observe these instructions may lead to risks. The Manufacturer declines any liability for injury to persons or animals or damage to property if this advice and relevant precautions are not respected.
- This product should not be used by children under 8 years old, unless supervised by an adult.
- Children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised. Alternatively these people can use if have been given instructions on safe appliance use and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years.

### **INTENDED USE OF THE PRODUCT**

- This appliance is designed solely for domestic use. This product is not intended for commercial use. The manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.

- **CAUTION :** The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not use the appliance outdoors.
- Do not store explosive or flammable substances such as aerosol cans and do not place or use gasoline or other flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.

## INSTALLATION

- Repairs must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Children should not perform installation operations. Keep children away during installation of the appliance. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, during and after the installation of the appliance.
- After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service.
- Keep children away during installation of the appliance.
- The appliance must be disconnected from the power supply before carrying out any installation operation.
- During installation, make sure the appliance does not damage the power cable.
- Only activate the appliance when the installation procedure has been completed.

## ELECTRICAL WARNINGS

 
- Make sure the voltage specified on the rating plate corresponds to that of your home.
- Regulations require that the appliance is connected to an earthed supply outlet.
- For appliances with fitted plug, if the plug is not suitable for your socket outlet, contact a qualified technician.

- Do not use extension leads, multiple sockets or adapters. Do not connect the appliance to a socket which can be operated by remote control.
- The power cable must be long enough for connecting the appliance, once fitted in its housing, to the main power supply.
- Do not pull the power supply cable.
- If the power cable is damaged it must be replaced with an identical one. The power cable must only be replaced by a qualified technician in compliance with the manufacturer instructions and current safety regulations. Contact an authorized service center.
- Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.

## ELECTRICAL CONNECTIONS

### Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

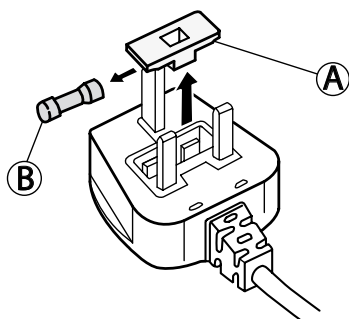

1. Remove the fuse cover (A) and fuse (B)
2. Fit replacement 13A fuse into fuse cover
3. Refit both into plug

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost, the plug must not be used until a correct replacement is fitted. Correct replacements are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.

### Socket outlet / plug

If the fitted plug is not suitable for your socket outlet, contact After-Sales Service for further instruction. Do not attempt to change the plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.

## **CORRECT USE**

- Never cover the toaster slot.
- Do not touch parts other than the operating controls, as the toaster will can become hot during toasting.
- Do not introduce any object inside the toaster, as this may cause damage or risks.
- Pull down the operating lever only for toasting: never block it.
- Make sure the crumb tray is perfectly in place before using.
- Never place aluminium foil on the warming rack. Never warm and toast at the same time.
- Avoid toasting food with extremely runny ingredients such as butter.
- As bread may burn, do not use toaster near or below curtains and other flammable materials.
- If the toaster starts to smoke, press the CANCEL button to stop toasting immediately.
- Do not attempt to remove the food when the toaster is in operation.
- Remove the bread carefully after toasting to avoid any injuries.
- Warning: When toasting small bread slices less than 8.5 mm high, be careful of the potential risk of burning when taking out the slice.
- Be careful not to damage the internal mechanism or heating elements when removing the bread.

## **CLEANING AND MAINTENANCE**

- The appliance must be disconnected from the power supply before carrying out any cleaning or maintenance.
- Never use steam cleaning equipment.
- Allow the unit to cool down completely before cleaning or storing it.

## PARTS AND FEATURES

1. Operating lever
2. Cancel button
3. Bagel/Sandwich button
4. Defrost button
5. Reheat button
6. Toasting level buttons
7. Display
8. Cord wrap
9. Removable crumb tray
10. Warming rack

## INTRODUCTION

Thank you for purchasing our product.

In doing so, you have opted for an effective high-performance appliance.

If the instructions on the correct use of this appliance are not observed, the manufacturer shall assume no responsibility for any resulting damage.


The operating instructions may refer to different models: any difference is clearly identified.

## BEFORE FIRST USE


Carefully wipe the outside of the appliance to remove any dust that may have accumulated. Dry with a dry cloth. Remove any stickers. As there is manufacturing residue or oil remained in the toaster or heat element, it usually will emit an odor for the first use. It is normal and will not occur after several times use. Before the first use, with the window open operate without any bread inside. Then let the toaster cool down and begin toasting.

## USING THE TOASTER


1. Put the food to be toasted into the bread slot. No more than one slice for each slot can be introduced at any one time.

 **Make sure the crumb tray is perfectly in place before using.**


2. Plug the power cord into the outlet.
3. Set the toasting level to the desired colour using the toasting level buttons. The lowest level is 1 and the highest level is 8. The bar at the bottom of the display will show the set level.

 **If you toast only one slice, set the toasting level lower than for two slices. If you toast the food continuously, the toasting colour of the different slices can be slightly different or darker, even if the same level is used.**


4. Pull down the operating lever until it engages: toasting will begin at once. The display will show the countdown till the end of toasting. Once the bread has been toasted to the preset level, the operating lever will automatically spring up.


 **The operating lever can rest on the bottom of the slot only if the plug was connected.**

5. During the toasting process, if the browning is satisfactory, press the CANCEL button to stop toasting.
6. If the bread was taken out of the freezer, set the toasting level according to your preference. Press the DEFROST button to toast it to your desired color, then pull down the operation lever until it is in place. The related symbol will appear on the display.
7. If you want to reheat any cold toasted bread, press the REHEAT button. Toasting time is fixed in this mode: when time is over the operating lever will automatically spring up and stop the reheating process. The related symbol will appear on the display.


 **Press the BAGEL/SANDWICH function to switch among bagel function - sandwich function - no special function activated. Related symbols will appear on the display.**


8. The Bagel function makes it possible to toast bread, bagels, muffins etc on one side only (external side), while the other side (internal side) remains warm. Bagels and muffins should be sliced in half before toasting.
9. The sandwich function allows the user to toast sandwiches or different kinds of bread slowly. By such function, your sandwich will be well browned on the outside and cooked inside.

 **This function can also be used in combination with the warming rack, for better warming results of any kind of bread or bakery products.**

 **During working condition, the functions like Defrost, Sandwich/Bagel and Reheat can not be switched to each other unless you press down the CANCEL button to make the carriage handle spring up automatically and make the appliance goes back to the standby mode.**





 The function is not available on levels 1 and 2; in these cases, when the reheat button is hold down, the display will quickly flash 3 times and Reheat function will be turned off.

 Toast any items only until they are golden brown and not brown or too dark.

Remove any burnt edges. Do not over-toast food containing starch - especially grain and potato products - to reduce the production of acryl amides.

If a slice gets stuck at the end of the toasting process, pull the power plug and carefully remove the bread after the toaster has cooled down.


 The use of browning levels from 4 to 6 is recommended for the preparation of sandwiches.


 Depending on the quantity or quality of stuffing, it can happen that the inside of the sandwich is not warm enough or completely melt: in case, please leave the sandwich into the slot for about one minute after ending the toasting.

## USING THE WARMING RACK

The food that cannot be placed inside the slots (e.g. rolls, baguettes, croissants) can be warmed on the warming rack

1. Place the support on the slot (see pic. 1 and 2)
2. Use the button to set the desired toasting level.
3. Pull down the operating lever until it engages.

 **Never place aluminium foil on the warming rack. Never warm and toast at the same time!**

 **Only set browning levels 1 and 2 when using the warming rack with the four-slots toaster.**

## CLEANING AND MAINTENANCE

1. Wipe the outside with a soft dry cloth after the toaster has cooled down. Never use metal polish.
2. Pull out the crumb tray from the bottom of the toaster and empty it. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
3. When the toaster is not used or is stored, the power cord may be wound under the bottom of the toaster.

4. If you use specific products for cleaning steel, be careful with the chrome parts, to avoid staining.

## SAFEGUARDING THE ENVIRONMENT

### DISPOSAL OF PACKAGING MATERIALS



The packaging material is 100% recyclable and is marked with the recycle symbol (\*). The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### SCRAPPING OF HOUSEHOLD APPLIANCES

When scrapping the appliance, make it unusable by cutting off the power cable and removing the doors and shelves (if present) so that children cannot easily climb inside and become trapped.



This appliance is manufactured with recyclable (\*) or reusable materials. Dispose of it in accordance with local waste disposal regulations.

For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchase the appliance.

This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol (\*) on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

## DECLARATION OF CONFORMITY

This appliance has been designed, constructed and distributed in compliance with the safety requirements of European Directives:

- 2006/95/EC Low Voltage Directive

- 2004/108/EC Electromagnetic Compatibility Directive

## **GUARANTEE**

**12 months Standard Guarantee  
Enhanced to 2 years upon product registration**

This certificate of guarantee represents the guarantee ("Guarantee" hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.

Your product has the benefit of our manufacturer's Guarantee, which covers the product for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the product at no cost to you.

This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date is provided.
- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.
- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.
- Replacement of any consumable item or accessory. These include but are not limited to:
- plugs, cables, light bulbs, hoses, brushes, covers and filters.
- Replacement of any removable parts made of glass or plastic.

## **After Sales Service**

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

## **Essential Contact Information Advice Line**

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline for telephone assistance.

**UK: 08448 240055**

**Republic of Ireland 0818 904 041**

**[www.hotpointservice.co.uk](http://www.hotpointservice.co.uk)**

**Please note:**

**Our advisors will require the following information:**

Model number:

Serial number:

## Consumables and Accessories

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

**UK: 08448 225225**

**Republic of Ireland: 0818 313 413**

**[parts.hotpoint.co.uk/shop](http://parts.hotpoint.co.uk/shop)**

## Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old products carefully.

## Register your new product and receive 1 additional year FREE!

As an additional benefit of owning your Hotpoint product, we are offering 1 years additional free guarantee. To be eligible for this you will need to contact us to register your product within 28 days of purchase. If you do not register your appliance within the 28 days you will still be entitled to 1 years manufacturer's guarantee. To activate your 2 year guarantee register online at [www.hotpoint.co.uk](http://www.hotpoint.co.uk). Please note that the extended guarantee is only available in the UK and Ireland and is subject to the same terms and conditions as the 1 year guarantee. Please refer to the certificate of guarantee for more information.



Indesit Company UK Ltd  
Morley Way,  
Peterborough PE2 9JB

[www.indesitcompany.com](http://www.indesitcompany.com)

TT 22E UK - TT 44E UK  
07/2015 - ver. 1.0