

Гарантийный талон №

irit®

Наименование изделия _____
 Номер модели _____
 Серийный номер _____
 Дата продажи « » _____ 20 г. М.П. _____
 торгующей
 организации

Условия гарантии:

Уважаемый покупатель! Вы приобрели изделие, произведенное под ТМ "IRIT". Данный талон дает Вам право на устранение дефектов изделия в авторизованных сервисных центрах в течении 12 месяцев со дня продажи. Все условия гарантии осуществляются в соответствии с действующим законодательством. Проследите, чтобы данный талон был правильно заполнен и имел печать торгующей организации.

В случае возникновения неисправностей техники в течение гарантийного срока, Вы можете обратиться в авторизованный сервисный центр, адреса и телефоны которых указаны на обороте гарантийного талона. Сервисный центр произведет ремонт или выпишет акт, в случае невозможности ремонта данного изделия. На основании этого акта Вы можете обратиться в торгующую организацию, в которой было приобретено изделие, для обмена.

После истечения гарантийного срока сервисные центры, указанные в гарантийном талоне, всегда готовы предложить Вас свои услуги по ремонту бытовой техники "IRIT".

Гарантия не включает в себя периодическое обслуживание, установку, настройку и чистку изделия, порядок которых изложен в Инструкции по эксплуатации.

Гарантийное обслуживание не производится при:

- несоблюдении правил эксплуатации изделия, установленных Инструкции по эксплуатации;
- утрате гарантийного талона;
- ремонте неуполномоченными на это лицами, а также при других, непредусмотренных инструкцией вмешательствах;
- механических повреждениях, возникших по вине потребителя;
- использовании изделия в целях, для которого оно не предназначено;
- внесение изменений и/или исправлений в текст данного талона.

С внешними данными и комплектацией товара ознакомлен: _____ (подпись)

Сохраняйте гарантийный талон и чек контрольно-кассовой машины на изделие. Без предъявления данного талона, его неправильном заполнении и/или отсутствии печатей торгующей организации на талоне и корешках, претензии к качеству не принимаются.

КОРЕШОК К ТАЛОНУ №	irit®	КОРЕШОК К ТАЛОНУ №	irit®
Модель: _____		Модель: _____	
Дата продажи _____ 20 г.		Дата продажи _____ 20 г.	
Наименование _____		Наименование _____	
Модель _____		Модель _____	
Сер. номер _____		Сер. номер _____	
Ф.И.О. клиента _____		Ф.И.О. клиента _____	
Телефон _____		Телефон _____	
Адрес _____		Адрес _____	
М.П. _____ торгующей организации		М.П. _____ торгующей организации	

Description

- 1.Steam Nozzle
- 2.Water Tank Lid
- 3.On/Off Switch Button
- 4.Handle
- 5.Max Water level
- 6.Water Tank
- 7.Fabric Brush
- 8.Lint Remover Brush
- 9.Plug Wire
- 10.Indicator Light

ACCESSORY ASSEMBLY

This appliance is supplied with two practical accessories:

1. Fabric Brush can easily help you to steam and iron all fabrics including delicate. It also works great on garments, drapes and upholstery.
2. Lint Remover refreshes your clothes and furniture by removing lint, dust, hair and so on. Use it for steaming and ironing fabrics.

Follow the steps below to attach the accessories to the steam nozzle:

Ensure the unit is turned Off and no steam emits from the nozzle.
 Choose the required attachment and slide onto the steam nozzle as shown in Fig.2.
 Ensure the holes on the steam nozzle are aligned with the open slots on the accessories so that steam does not get blocked.

CAUTION: To avoid burns do not attach accessories to the nozzle whilst steam is emitting.

INSTRUCTION FOR USE

Filling the Water Tank

- 1.Ensure the appliance is unplugged from the mains power supply.
- 2.Place the Steamer on a flat, stable surface.
- 3.Carefully unscrew and remove the water tank cap.
- 4.Fill the water tank with water
- 5.Fill the tank with cold water not to exceed the Maximum mark indicated in the water tank window.
- 6.Replace the water tank cap ensuring it is thoroughly tightened.

CAUTION:

After each use, always allow the unit to cool for 15 minutes before filling cold water and shooting steam from the fill hole. Extreme caution is required when pouring water into the water tank. Never fill water to exceed the Max fill line.

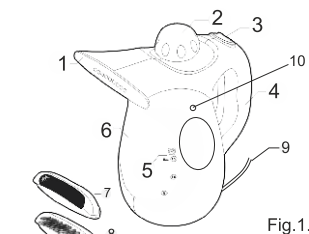


Fig.1.

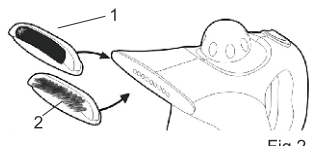


Fig.2.

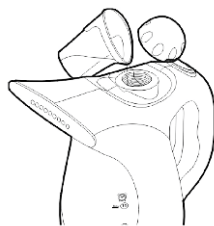


Fig.3.

irit®

MANUAL INSTRUCTION ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

Отпариватель электрический Garment steamer IR-2314



7.Extreme caution is required when pouring water into the water tank.

8.Never fill water to exceed the Max fill line.

Steaming Linens and Fabrics

Ensure the water tank has been filled and that the desired accessory is connected and then follow the steps below:

Plug the unit into the mains power supply and switch it on if switchable.

Switch the unit on and the button will illuminate to indicate the appliance is on.

Steam will emit from the nozzle after approximately 2 minutes.

Direct the steam nozzle with either one of the accessories towards the materials you wish to steam.

Keep the flow of steam focused on the material being steamed.

Using a slight back and forth motion over the area you are steaming further enhances the process.

CAUTION: Always be sure that the Steam Nozzle and any other attachments are pointed in safe direction away from the user, other people and animals when steam is emitting.

IMPORTANT SAFEGUARDS

Please read the owner's manual before using the product.

Before using, please check the voltage of the product if it is the same with the one in your home.

Do not leave the appliance in water or any other liquids.

It is imperative to unplug the appliance from the mains power supply after been used, before cleaned and whilst being repaired.

Do not add chemicals or detergents to the water tank as they will damage the unit.

Close supervision is required when using this product near children.

Never leave the appliance within reach of children.

Repairs to electrical appliances should only be performed by a qualified electrician.

Improper repairs may place the user at serious risk.

This appliance is intended for household use only and should not be used for industrial purposes.

Do not operate this appliance with a damaged plug or cord, after a malfunction, or after being dropped or damaged in any way.

Always disconnect the appliance from the mains power supply when filling or emptying water. Ensure the water tank is emptied after each use before storing.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

TECHNICAL CHARACTERISTICS:

Voltage: 220-240V/50Hz
 Power:800 W
 Water tank capacity: 200 ml

The date of manufacture is marked on the packaging.

The importer retains his right to make changes in appearance and completeness of the item without preliminary notification to the customer.

For household usage only.

Do not leave unattended!

Service life is 2 years.

Made in China



